



## **IMPORTANT NOTICE:**

**The control throws listed in the manual for the Stinson Reliant are incorrect. Refer to this sheet for correct control throw information.**

**Measure the control surfaces at the widest point.**

	<b>Low Rate</b>	<b>High Rate</b>
Aileron:	10mm up/7mm down	15mm up/10mm down
Elevator:	10mm up/down	15mm up/down
Rudder:	17mm left/right	22mm left/right
	<b>1/2 Flap</b>	<b>Full Flap</b>
Flap:	15mm	25mm down